Condensed DCxxB Menu

Condensed DCxxB Menu

Tune - Hit "Function" until "T" is heard. Dah to key TX, Dit to stop, hit "Function" to return.

Change Code Speed - Hit "Function" key, after "S" is heard, dah to increase, dit to decrease speed by 1 wpm. Normal operation is resumed after 1 sec. pause.

Enter Message - Hit "Function" until "M" is heard. Enter up to 29 chor, Hit "Function" when done. Message will repeat for check. If correct, hit "1" to store in location 1, 2 to store in location 2. "MS" will sound and normal operation is resumed.

Send Message - Hit "Function" briefly. Tap Dit to send message #1, Dah to send message #2. To pause, hold Dah paddle, to stop hold Dit paddle.

Beacon Mode - Hold "Function" during sending of message #1. Letter "B" will be heard in sidetone. Touch either paddle during the fixed 3 sec. between repeated message will terminate beacon mode.